

Modules will install in order from module number 1 in increasing order until the last module. Review module cable connection on page 8.

276	253	252	229	228	205	204	181	180	157	156	133	132	109	108	85	84	61	60	37	36	13	12
275	254	251	230	227	206	203	182	179	158	155	134	131	110	107	86	83	62	59	38	35	14	11
274	255	250	231	226	207	202	183	178	159	154	135	130	111	106	87	82	63	58	39	34	15	10
273	256	249	232	225	208	201	184	177	160	153	136	129	112	105	88	81	64	57	40	33	16	9
272	257	248	233	224	209	200	185	176	161	152	137	128	113	104	89	80	65	56	41	32	17	8
271	258	247	234	223	210	199	186	175	162	151	138	127	114	103	90	79	66	55	42	31	18	7
270	259	246	235	222	211	198	187	174	163	150	139	126	115	102	91	78	67	54	43	30	19	6
269	260	245	236	221	212	197	188	173	164	149	140	125	116	101	92	77	68	53	44	29	20	5
268	261	244	237	220	213	196	189	172	165	148	141	124	117	100	93	76	69	52	45	28	21	4
267	262	243	238	219	214	195	190	171	166	147	142	123	118	99	94	75	70	51	46	27	22	3
266	263	242	239	218	215	194	191	170	167	146	143	122	119	98	95	74	71	50	47	26	23	2
265	264	241	240	217	216	193	192	169	168	145	144	121	120	97	96	73	72	49	48	25	24	1


STAX Boost Power Continuation Cable found in (Yellow Labeled Bag). Required after each 12th consecutive module per display face. Review Boost Power Cable Continuation connection on page 8.

STAX Controller Cable Kit found in (Red Labeled Bag). One cable kit per display face. Includes one Primary Controller Power Cable and one 1st Module Power/Data Cable


This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules.

All components are auto switching between 120 and 240 Volts. Maximum Amperage per lead: 16 Amps @120V. Multiple leads can be connected together and share a breaker. Multiple circuits may share the same neutrals. Display electrical requirements per face are shown below. 9.5mm values are 6% less. Follow your local NEC Codes & regulations.

PRIMARY DISPLAY FRONTVIEW

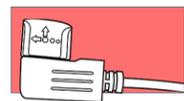

TYP. (1)
1st Module Power/Data Cable must be connected to first module and to STAX Controller

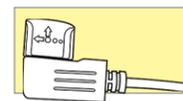


TYP. (22)
STAX Boost Power Continuation Cable required (at maximum) after each 12th consecutive module per display face.

Additional displays of the same size will be configured identically. Unique installations of size and location may require additional engineering discussion with Next.



Product Conforms to
UL STD. 48,
UL STD. 62368-1, &
CSA STD. C22.2 NO.
62368*1

Circuit	Modules	Maximum Watts	Average Watts	Maximum Amps@120V	Maximum Amps@208V	Maximum Amps@240V
1	1 - 24	1872	992	15.6	9.0	7.8
2	25-48	1872	992	15.6	9.0	7.8
3	49-72	1872	992	15.6	9.0	7.8
4	73-96	1872	992	15.6	9.0	7.8
5	97-120	1872	992	15.6	9.0	7.8
6	121 - 144	1872	992	15.6	9.0	7.8
7	145 - 168	1872	992	15.6	9.0	7.8
8	169-192	1872	992	15.6	9.0	7.8
9	193-216	1872	992	15.6	9.0	7.8
10	217-240	1872	992	15.6	9.0	7.8
11	241-264	1872	992	15.6	9.0	7.8
12	265-276	936	496	7.8	4.5	3.9
TOTAL	276	21528	11410	179.4	103.5	89.7

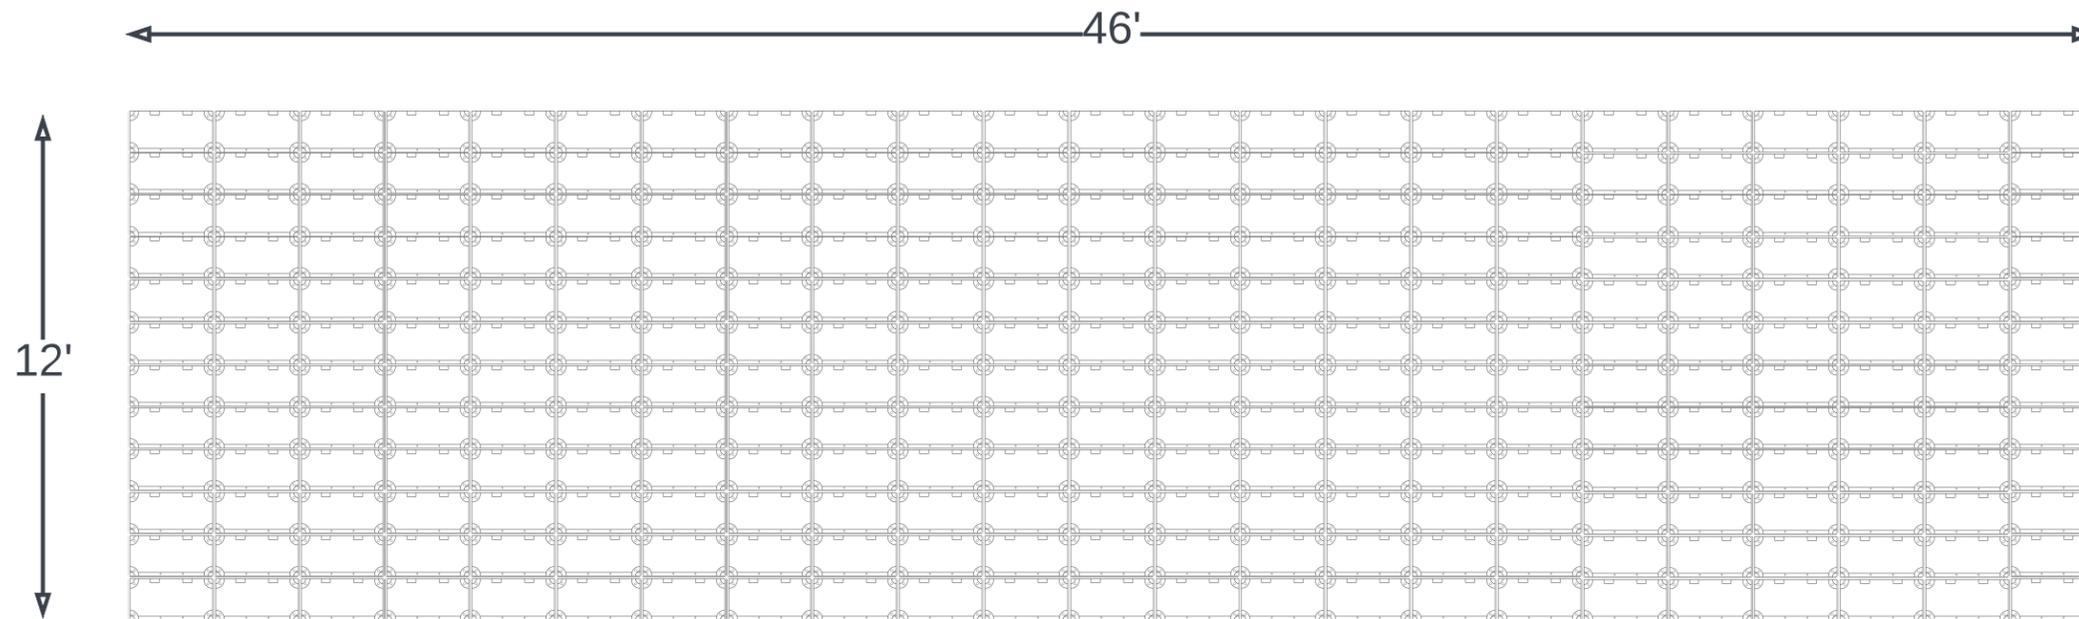


The display can be assembled with 2'x4' frames and 1'x2' frames. All frames are interchangeable. If desired, displays can use all 1'x2' frames.

Part Description	Part Weight (lbs)
1' x 2' 6.3MM / 9.5MM STAX LED DISPLAY MODULE	8.8
1' x 2' STAX LED DISPLAY FRAME	5.25
1' x 2' STAX LED DISPLAY FRAME DOOR	2.1
2' x 4' STAX LED DISPLAY FRAME	11.25
2' x 4' STAX LED DISPLAY FRAME DOOR	4.5
STAX PC CONTROLLER	9.6

Maximum weight shown shows total display weight using only 1'x2' frames and frame doors. Actual weight may be less and will be represented on the quote number purchased. Contact Next for any questions regarding dependencies

PRIMARY DISPLAY REARVIEW

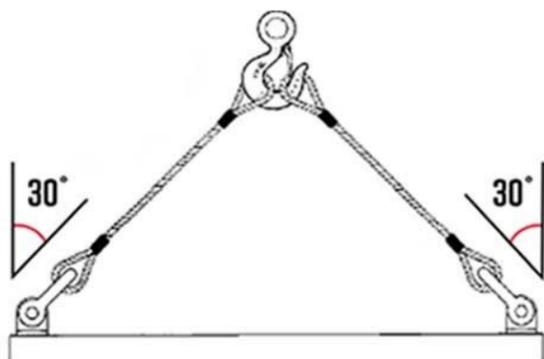

SHACKLE ATTACHMENT

The shackle cables should connect to the lifting pins at an angle of 30 degrees or less to prevent damage to the cabinet frame. Spreader bar should be used when three or more lifting pins are required per face. Must lift final assembled sign with a minimum of two lifting points. Determine total number of lifting points with a 330 maximum lbs per lifting pin.

Display Face	Maximum Weight (lbs) Including Frame Doors	Maximum (lbs) Per Lifting Pin	Number of Pins Per Face
1	5037	330	16
2	10074	N/A	N/A

LAUNCH INSTRUCTIONS

1. Assemble all frames and modules per installation instructions on page 1.
2. After all modules have been assembled, connect the controller to the first module of the display face with the 1st Module Power/Data cable found in the RED labeled cable kit bag. You will use one cable for the primary display and one cable for the secondary display. Primary power [A] is connected to primary display output [C] and secondary power [B] is connected to secondary display output [D].
3. Connect the controller primary power to a power source with the power cable found in the RED labeled kit bag.
4. Power-up the primary power source for the controller box. On initial powerup the successful sequence on the display will appear as:
 - 1) Flash of light
 - 2) Black screen
 - 3) Blue screen
 - 4) Logo screen
 - 5) Black screen
5. Contact Next (833-474-STAX) for final configuration and software connection. We will remotely work with your technician and configure the display in under 10 minutes.



Each display face requires a controller cable kit consisting of one primary power cable and one display connection cable.

Each primary power connection is an independent circuit. For smaller displays, the Primary and Secondary display power connection can share a circuit. Confirm loads and all electrical details prior to installation.

Cellular Antenna, with mounting bracket, is included and ready for installation. Light Sensor, with mounting bracket, is included and ready for installation. They are connected through Input [E].

Lifetime installation support and software training are available prior to, during, and after the installation of display.

Mounting brackets and screws are included. There are multiple bracket installation positions available. Not all are required to be used. Do not puncture or modify the control box without approval from Next.

For installations requiring direct Cat5e connections or wireless point to point antennas, please contact Next to confirm parts and installation method.

PIXEL PITCH	PIXEL HEIGHT	PIXEL WIDTH
6mm	576	2208
9mm	384	1472



PARTS AND PACKAGING

PARTS LIST				
PART NUMBER	PART DESCRIPTION	QUANTITY REQUIREMENTS	SINGLE FACE	DOUBLE FACE
1701-MODULE / 1700-MODULE	1' x 2' 6.3MM / 9.5MM STAX LED DISPLAY MODULE		276	552
3700-CONTROL	STAX LED DISPLAY CONTROLLER	1 PER DOUBLE FACE DISPLAY	1	1
1780-CONTROL	STAX CONTROLLER CABLE KIT	1 PER FACE	1	1
1772-MODULE	STAX BOOST POWER CONTINUATION CABLE	1 PER EACH 12 MODS STARTING AT 13	22	44
0712-CABINET	STAX CONTROLLER MOUNTING PLATE	1 PER STAX CONTROLLER	1	1

CRATE PACKAGING				
PART NUMBER	PART DESCRIPTION	QUANTITY PER CRATE	CRATE SIZE WxLxH (In)	CBM
1701-MODULE/ 1700-MODULE	1' x 2' 6.3MM / 9.5MM STAX LED DISPLAY MODULE	12	29x27x27	.41
0770-CABINET	1' x 2' STAX LED DISPLAY FRAME	12	29x27x27	.41
0771-CABINET	1' x 2' STAX LED DISPLAY FRAME DOOR	40	35x25x28	.75
0772-CABINET	2' x 4' STAX LED DISPLAY FRAME	6	51x28x31	.40
0773-CABINET	2' x 4' STAX LED DISPLAY FRAME DOORS	25	46x25x28	.54

AND

OPTION 1: MIXED FRAME ASSEMBLY				
PART NUMBER	PART DESCRIPTION	QUANTITY REQUIREMENTS	SINGLE FACE	DOUBLE FACE
0770-CABINET	1' x 2' STAX LED DISPLAY FRAME	1 FRAME SUPPORTS 1 MODULE	12	24
0771-CABINET	1' x 2' STAX LED DISPLAY FRAME DOOR	1 DOOR PER FRAME	12	24
0772-CABINET	2' x 4' STAX LED DISPLAY FRAME	1 FRAME SUPPORTS 4 MODULES	66	132
0773-CABINET	2' x 4' STAX LED DISPLAY FRAME DOOR	2 DOORS PER FRAME	132	264

OR

OPTION 2: SINGLE FRAME ONLY ASSEMBLY				
PART NUMBER	PART DESCRIPTION	QUANTITY REQUIREMENTS	SINGLE FACE	DOUBLE FACE
0770-CABINET	1' x 2' STAX LED DISPLAY FRAME	1 FRAME SUPPORTS 1 MODULE	276	552
0771-CABINET	1' x 2' STAX LED DISPLAY FRAME DOOR	1 DOOR PER FRAME	276	552
0772-CABINET	2' x 4' STAX LED DISPLAY FRAME	1 FRAME SUPPORTS 4 MODULES	0	0
0773-CABINET	2' x 4' STAX LED DISPLAY FRAME DOOR	2 DOORS PER FRAME	0	0

1' X 2' MODULE FRAME

The display can be assembled with 2'x4' frames and 1'x2' frames. All frames are interchangeable. If desired, displays can use all 1'x2' frames.

Four hole frame steel connection plates are not required for assembly and provided for flexibility in installation solutions.



PARTS INCLUDED WITH EACH FRAME	
PART	QUANTITY
12mm Bolts	6
12mm washers	4
12mm nuts	4
Four hole frame steel connection plates	1

RECOMMENDED TOOLS FOR ASSEMBLY	
PART	
Impact Drill	
19mm Socket	
19mm Wrench	
Allen Wrench Tool (Provided in Controller Box)	

2' X 4' MODULE FRAME

The display can be assembled with 2'x4' frames and 1'x2' frames. All frames are interchangeable. If desired, displays can use all 1'x2' frames.

Four hole frame steel connection frames are not required for assembly and provided for flexibility in installation solutions.



PARTS INCLUDED WITH EACH FRAME	
PART	QUANTITY
12mm Bolts	6
12mm washers	4
12mm nuts	4
Four hole frame steel connection plates	1

RECOMMENDED TOOLS FOR ASSEMBLY	
PART	
Impact Drill	
19mm Socket	
19mm Wrench	
Allen Wrench Tool (Provided in Controller Box)	

Redundancy is a special order installation that requires a custom order cable. Next supplies this cable directly to the installer separate from traditional product orders.

When redundancy is utilized it requires the primary and secondary displays to be configured using only one 1st Module Power/Data Cable connected to the primary display. The secondary display will be connected in series with a Boost Power Connection Cable from the last module of the primary display to the first module of the secondary display.


The Redundancy Cable will be connected to the last module on the secondary display, or primary display if there is only one face.

276	253	252	229	228	205	204	181	180	157	156	133	132	109	108	85	84	61	60	37	36	13	12
275	254	251	230	227	206	203	182	179	158	155	134	131	110	107	86	83	62	59	38	35	14	11
274	255	250	231	226	207	202	183	178	159	154	135	130	111	106	87	82	63	58	39	34	15	10
273	256	249	232	225	208	201	184	177	160	153	136	129	112	105	88	81	64	57	40	33	16	9
272	257	248	233	224	209	200	185	176	161	152	137	128	113	104	89	80	65	56	41	32	17	8
271	258	247	234	223	210	199	186	175	162	151	138	127	114	103	90	79	66	55	42	31	18	7
270	259	246	235	222	211	198	187	174	163	150	139	126	115	102	91	78	67	54	43	30	19	6
269	260	245	236	221	212	197	188	173	164	149	140	125	116	101	92	77	68	53	44	29	20	5
268	261	244	237	220	213	196	189	172	165	148	141	124	117	100	93	76	69	52	45	28	21	4
267	262	243	238	219	214	195	190	171	166	147	142	123	118	99	94	75	70	51	46	27	22	3
266	263	242	239	218	215	194	191	170	167	146	143	122	119	98	95	74	71	50	47	26	23	2
265	264	241	240	217	216	193	192	169	168	145	144	121	120	97	96	73	72	49	48	25	24	1


PRIMARY DISPLAY FRONTVIEW

PIXEL PITCH	REDUNDANCY MAXIMUM NUMBER OF MODULES
6mm	336
9mm	168


If the display exceeds the maximum number of modules for use of redundancy contact Next for assistance in additional equipment and setup. May require additional equipment not previously quoted.



TYP. (1)
1st Module Power/Data Cable must be connected to first module and to STAX Controller




TYP. (22)
STAX Boost Power Continuation Cable required (at maximum) after each 12th consecutive module per display face.



TYP. (1)
Redundancy Data Cable, to be connected from the last module, to sending card port 2 within the control box.



Quantity of boost power cables will vary depending on total number of modules in the display. Some installations can use a Boost Power Continuation Cable before the 12th module. Refer to specific display schematics on page 1 for recommended installation.



STAX Boost Power Continuation Cable found in (Yellow Labeled bag). Required after each 12th consecutive module (Maximum) per display face.

Boost power cable lead can be combined with other leads to primary power. Electrical schedule can be found on page 1.



PROJECT DETAIL

INTENTIONALLY LEFT BLANK



PROJECT DETAIL

INTENTIONALLY LEFT BLANK